Author: Loki Elfin
E-mail: loki@acrel.cn
Website: www.acrel-electric.fr

0. Installation Dimension

Dimension of necessary hardware including:


(1) ADL300-EY 3-phase Prepaid&Postpaid Energy Meter (Main Body&Terminal Block/PIN)



(1) Dimension of Main Body of ADL300-EY



(1) Dimension of Power Wiring Terminal Block of ADL300-EY [for direct power wiring]

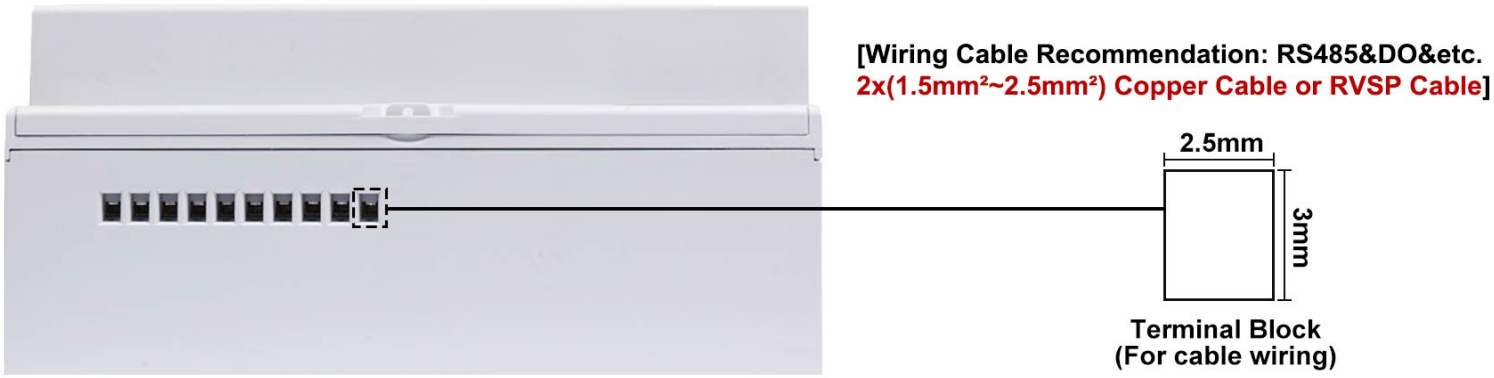

(1) Dimension of Comms.&DO Terminal Block of ADL300-EY [for RS485&DO Interface Wiring]

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Author: Loki Elfin
E-mail: loki@acrel.cn
Website: www.acrel-electric.fr

1. Wiring Illustration

Only 1 parts of wiring was necessary for wiring of ADL300-EY

(1) Power Wiring of ADL300-EY [3P4W, direct connect ver.]:

Use PIN L1 & PIN L1' for phase A live line power input&output respectively

Use PIN L2 & PIN L2' for phase B live line power input&output respectively

Use PIN L3 & PIN L3' for phase C live line power input&output respectively

Use PIN N for neutral line power input.

Noted: The installation direction of ADL300-EY must be according to the actual forward current& energy direction.





1

PIN for Current&Voltage Out/Input

① PIN #L1: Phase A Input
② PIN #L2: Phase B Input
③ PIN #L3: Phase C Input
④ PIN #N: Neutral Output

L1	L2	L3	N
A	B	C	N

2

Terminal/PIN for RS485 Interface

① PIN #21: RS485 Port A+ [1st way]
② PIN #22: RS485 Port B- [1st way]
③ PIN #24: RS485 Port A+ [2nd way]
④ PIN #25: RS485 Port B- [2nd way]

21	22	24	25
+	-	+	-
A	B	A	B

3

Terminal/PIN for Pulse Output

① PIN #17: Positive Pulse Output
② PIN #18: Negative Pulse Output

17	18
+	-
Ep	Ep

4

Terminal/PIN for Digital Output

① PIN #40&41: 1st DO
② PIN #42&43: 2nd DO

40	41	42	43
DO1		DO2	

PIN Overview of ADL300-EY
[Direct Connect Ver.]

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Author: Loki Elfin
E-mail: loki@acrel.cn
Website: www.acrel-electric.fr

1. Wiring Illustration

Only 1 parts of wiring was necessary for wiring of ADL300-EY

(1) Power Wiring of ADL300-EY [3P4W, direct connect ver.]:


Use PIN L1 & PIN L1' for phase A live line power input&output respectively

Use PIN L2 & PIN L2' for phase B live line power input&output respectively

Use PIN L3 & PIN L3' for phase C live line power input&output respectively

Use PIN N for neutral line power input.

Noted: The installation direction of ADL300-EY must be according to the actual forward current& energy direction.

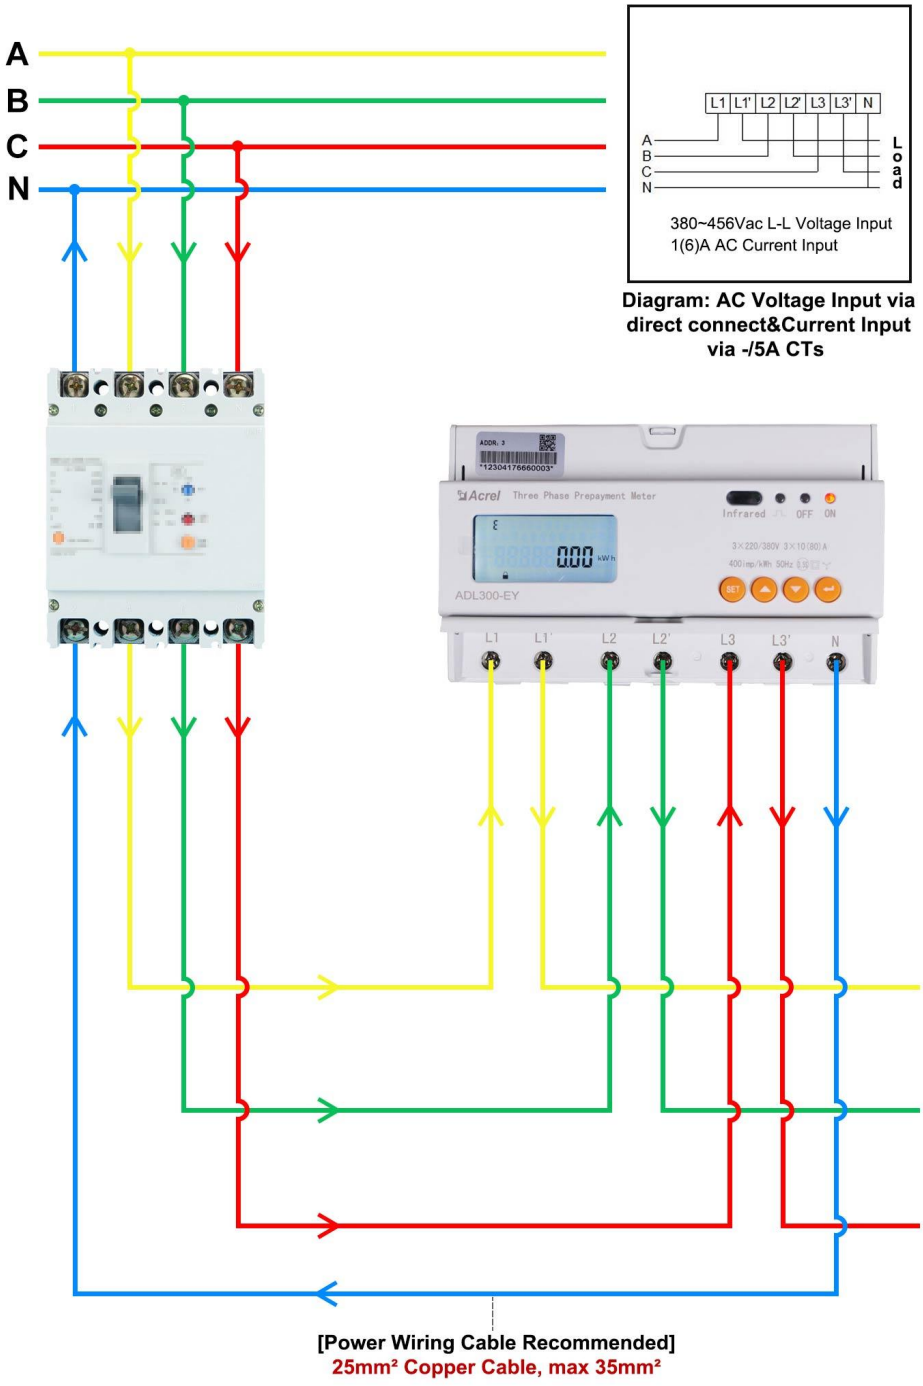

(1) Power Wiring of ADL300-EY [direct connect ver, 3P4W]

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000

Author: Loki Elfin
E-mail: loki@acrel.cn
Website: www.acrel-electric.fr

1. Wiring Illustration

(2) RS485 Communnication Wiring between ADL300-EY and upstream devices [Take AWT100 Series IoT Gateway for exmaple]:

PIN 21 of AWT100 connected to PIN 21 of first ADL300-EY to PIN 21 of second ADL300-EY and to PIN 21 of last ADL300-EY.

PIN 22 of AWT100 connected to PIN 22 of first ADL300-EY to PIN 22 of second ADL300-EY and to PIN 22 of last ADL300-EY.

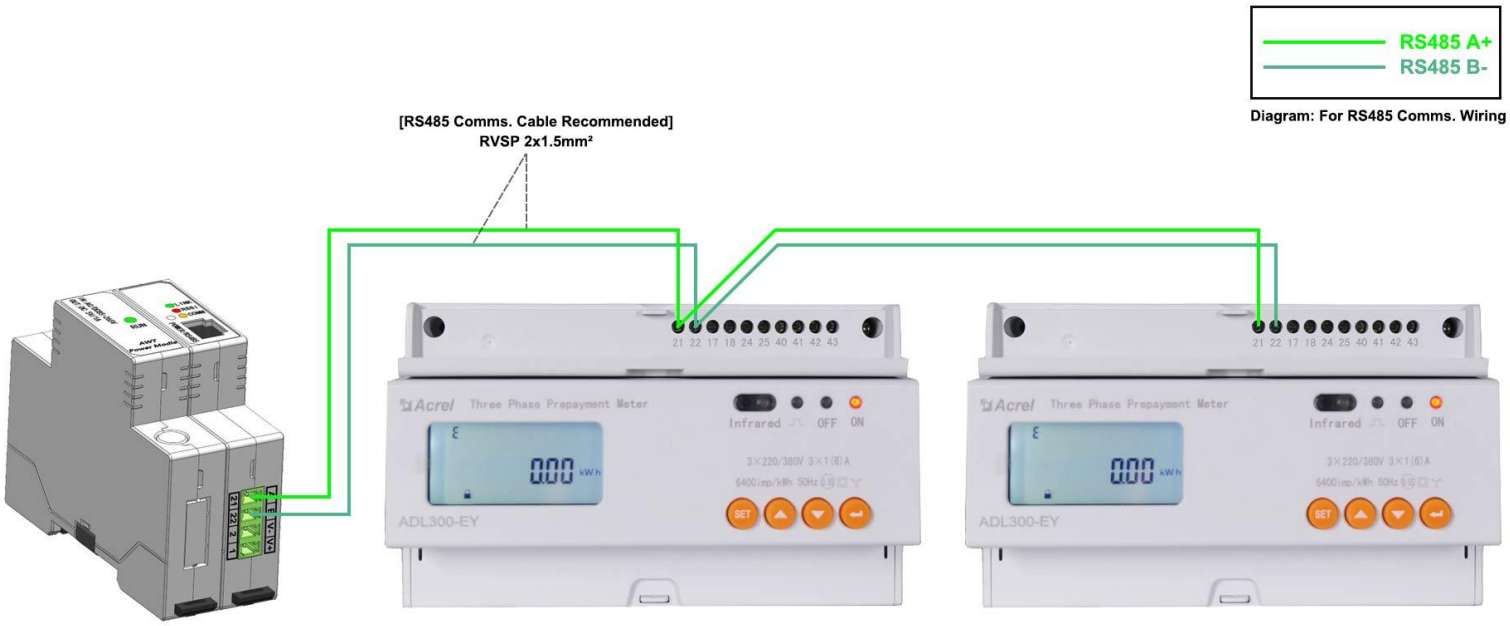


Diagram: For RS485 Comms. Wiring

(2) RS485 Communication Wiring between ADL300-EY&AWT100 Series

Distribuída no Brasil pela LRI | vendas@lri.com.br | 51 2129-3000